Electric Height Adjustable Desk

ASSEMBLY & USE INSTRUCTIONS

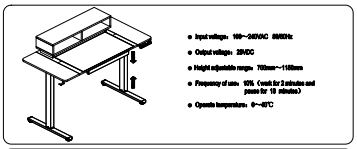

- Input voltage: 100~240VAC 50/60Hz
- Output voltage: 25VDC
- Height adjustable range: 700mm~1150mm
- Frequency of use: 10% (work for 2 minutes and pause for 18 minutes)
- Operate temperature: 0~40℃

Packing list

NO.	Accessories	NO.	Accessories	NO.	Accessories	NO.	Accessories	NO.	Accessories	NO.	Accessories
1	×1	9	×1	17	M3-10 ×4	25	M3-10 ×4	33	M3-10 ×4		
2	×1	10	×1	18	M3-8 ×1	26	×2	34	×1		
3	×1	11	×1	19	M3-8 ×1	27	×2	35	×1		
4	×1	12	×2	20	M3-10 ×12	28	×1	36	M3-10 ×4		
5	×1	13	×1	21	×8	29	×1	37	×1		
6	×1	14	×1	22	M3-10 ×36	30	×1				
7	×2	15	M3-10 ×4	23	M3-10 ×2	31	×1				
8	×2	16	M3-10 ×8	24	M3-10 ×4	32	M3-10 ×6				

Spare Parts: M3-10 ×1, M3-10 ×4, M3-10 ×1, M3-10 ×1, M3-10 ×1, M3-10 ×1

Step1:

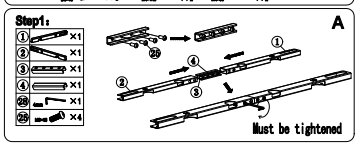

Step2:



Step3:

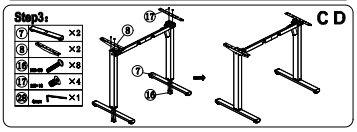

Step4:

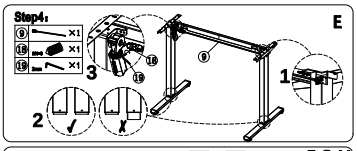

Step5:

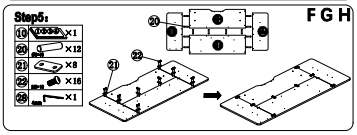

Step6:

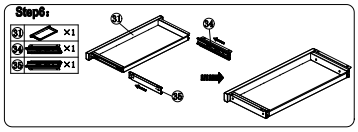

Step7

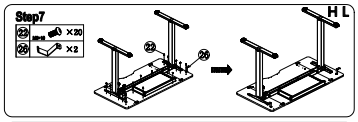

Step8:

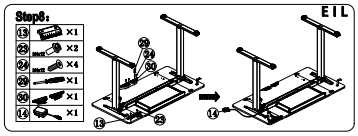

Step9:

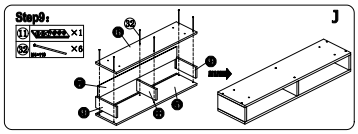

Step10:

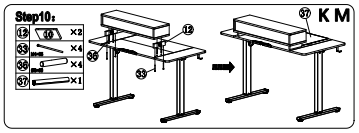

Operating Instruction

S	Short-press the 'S' button, and the display will flash, Press the 1, 2, or 3 button to save the current height setting to that button.
1	Press the '1' button, and the desk will move to the height that was previously set for that button.
2	Press the '2' button, and the desk will move to the height that was previously set for that button.
3	Press the '3' button, and the desk will move to the height that was previously set for that button.
▲	Press the '▲' button to raise the desk continuously until it reaches the highest position of 45.3"(115cm) or the button is released.
▼	Press the '▼' button to lower the desk continuously until it reaches the lowest position of 27.5"(70cm) or the button is released.

Settings

Change Display Height Units	Press and hold the 'S' button until a flashing 'S-' is displayed. Press 'S' again, and 'un' is displayed. Press 'S' to select it, press '▲' or '▼' to switch between 'IN' (imperial) and 'IS' (metric), and press 'S' to save your choice.
Change Collision Detection Sensitivity	Press and hold the 'S' button until a flashing 'S-' is displayed. Press 'S' again, and 'un' is displayed. Press '▲' or '▼' to switch to 'CP' and press to select it, Press '▲' or '▼' to switch between off, low (L), normal (M), and high (H) sensitivity. Press 'S' to save your choice.
Reset	Desktop running to the lowest level. Press and hold the '▼' button for 5 seconds, and the screen will show 'RES'. Continue holding until the desk goes down to its lowest level and comes back up slightly.

Protection Mode Error Codes

Hot	Overheating Protection: When the motor has been working continuously for 2 minutes, it will stop operating to prevent damage from overheating. Wait for at least 18 minutes before making any further height adjustment.
E10	Sensor Malfunction Warning: Motor safety sensor can't be detected. Power off, check the connection between the motor and controller, and power back on again.
E20	Overloading Warning: Max load exceeded. If raising the desk, take the things off the desk and try again. If lowering the desk, power off, take the things off the desk, power back on, and try again.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or bottom are detected. If this detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, power off the desk, check the connection between power and the controller, and power on again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, power off the desk, check the connection between power and the controller, and power on again.